



If the fence will run on an angle to the post, use rail bracket adaptors to adjust the bracket angle. Each adaptor provides 22.5 degrees of adjustment. Mount the adaptor with two screws through the center holes into the post and then run your four screws through the outer holes of both the bracket and the adaptor into the post. More than one adaptor can be used if necessary.

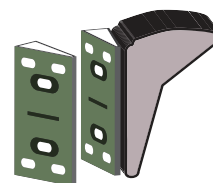

Note: A 35 degree angle is the maximum angle the top rail can be cut without sticking out past the post.

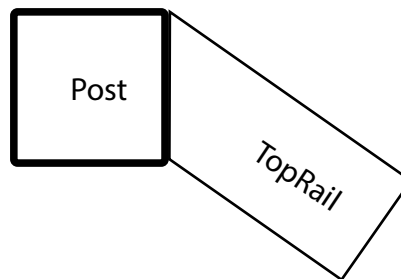

If the angle is greater than 35 degrees, you will need to set two posts to accomodate the angle.

